

Installation and Operating Instructions


Model:

OX-1-6S-5

OX-1-6S-8

For your convenience, we recommend to attach the serial number label HERE.

As part of Parmco Appliances commitment to improving and updating product ranges, we reserve the right to alter, change and update technical specifications and appearance attributes of all Parmco Appliances products. E&OE.

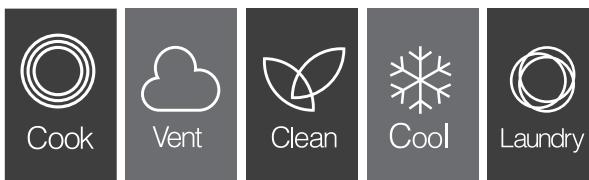

Parmco Appliances extended 7 year warranty

The Warranty:

- This appliance is intended for domestic use in the owners' home. Use of the appliance for commercial purposes will limit the warranty period (please see Parmco website for commercial details).
- Subject to the terms and conditions contained within this warranty, if the product is not of Acceptable Quality (as defined in the Consumer Guarantees Act) within 7 years of the date of original purchase, then Parmco Sales undertakes to repair or, at its sole discretion, replace the product.
- The warranty does not cover the costs of transport, mileage or travelling time if the product is located beyond 30km of a recognised Service Agent.
- This warranty is offered as an extra benefit, and does not affect other legal rights, which can not be modified or excluded by agreement.
- This warranty only applies to goods supplied and installed in the North and South Islands of New Zealand.
- The provisions of this warranty are in addition to the rights and remedies available to consumers under the Consumer Guarantees Act 1993.

Product _____ Date of purchase _____

Serial Number _____

Dealer / Retailers Name _____

Please retain this Warranty card together with receipt or other proof of purchase date when seeking service during the warranty period

Please contact Parmco at 09 573 5678 if your appliance needs servicing under warranty. Please have your model number and proof of purchase ready. Warranty repairs must be authorized by Parmco.

p: 09 573 5678
f: 09 573 5699
e: sales@parmco.co.nz
w: www.parmco.co.nz



The Warranty is not valid:

- If the product is not installed and operated in accordance with the operating instructions.
- If the product is not installed to comply with the electrical, gas, plumbing and other Regulations and Codes of Practice in New Zealand.
- If the product is operated on voltages or frequencies outside the normal range for domestic appliances in New Zealand.
- If the product is not used in normal domestic use, or if it is used in a business as defined in the Consumer Guarantees Act.
- If any serial number has been removed or defaced.
- If proof of date of purchase is not supplied, except at the sole discretion of Parmco Sales. Proof of purchase can be for the product itself, or if installed with a kitchen or house then proof of purchase can be from a Parmco reseller of products supplied by Parmco.
- If the products are purchased in a second hand condition from other parties (including but not limited to TradeMe, Sella, etc.)

Liability under this warranty will not be accepted for:

- Wear and tear caused by normal domestic use of the product.
- Damage in transport.
- Damage caused to the product by neglect, abuse, negligence, wilful act or misuse.
- Any costs associated with the repair, replacement, removal or reinstallation of products installed in a damaged condition.
- Any defect caused by accident, misuse, neglect, tampering with or unauthorised modifications of the appliance or any attempt at internal adjustment or repair by any person other than an Authorised Service Agent.
- Service calls that relate principally to the following:
- Instruction on how to use the product.
- Repair or replacement of house fuses, electrical wiring, gas fitting or plumbing.
- Normal or scheduled maintenance including blocked filters or ducting.
- Consumable items such as light bulbs.
- Any damage to hobs caused by spills when cooking.
- Any breakage or damage of glass items.
- Any damage caused by non recommended product used for cleaning, maintaining, lubricating or similar.
- Any aspect relating to the installation of the product, or damage caused during installation including blocked access for repair.
- Any third party (including reseller) or consequential loss or damage (direct or indirect) however arising.



P A R M C O

Dear Valued Customer,

Thank you and congratulations on purchasing your new Parmco appliance.


All Parmco products are made to the highest quality and design standards. We are sure you will enjoy your new appliance.

As a note, please read through these instructions carefully. These will assist you in gaining a complete understanding of the functions and features offered by your appliance. Please take special note of all detailed technical information and installation instructions. It is essential that you follow these instructions to ensure the safety and reliability of this appliance.

Furthermore, not using appropriate personnel to install this appliance may affect any future warranty claims lodged, so please check with Parmco Appliances before any installation is carried out.

We hope you enjoy your new appliance. If you would like to find out more about this product or any other products in Parmco's extensive range, visit us online at www.parmco.co.nz.

Regards,
The Parmco Team

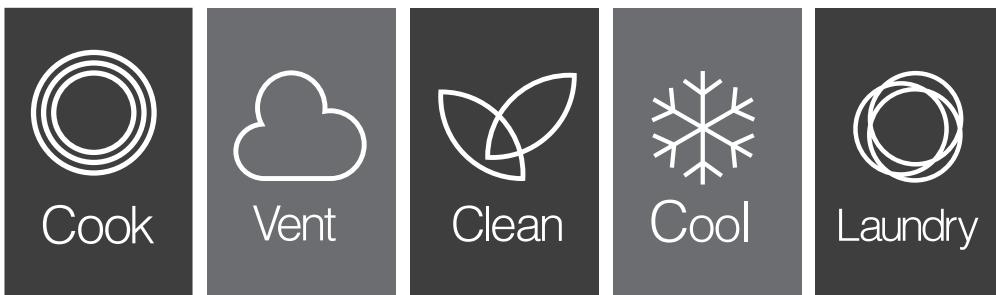

INDEX

	PAGE
Safety instructions	4
Product description	7
Cooking Functions	8
Operating Instructions	9
Cooking Guide	18
Maintenance	20
Installation Instructions	23

IMPORTANT SAFETY INFORMATION

The appliance becomes very hot during operation. Take care not to touch the heating elements inside the oven.

WARNING: Accessible parts may become hot during use. To avoid burns young children should be kept away.

Mains lead of adjacent appliances may be damaged by hobs or stuck between the oven doors, and produce short circuit, therefore keep them at safe distance from the appliance.

Never put pans weighing over 15Kg on the opened door of the oven.

Do not use the oven in the event of a technical fault, once a technical fault caused, disconnect the power and report the fault to the service centre to be repaired.

Never clean the oven with the high-pressure steam cleaning device, as it may provoke short circuit.

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the door glass as they can scratch the surface, which could then result in the glass shattering.

The rules and provisions contained in this instruction manual should be strictly observed. Do not allow anybody who is not familiar with the contents of this instruction manual to operate the oven.

During use the appliance becomes hot, care should be taken to avoid touching heating elements inside the oven.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

WARNING Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

WARNING: The appliance and its accessible parts become hot during use.

Care should be taken to avoid touching heating elements.

Children less than 8 years of age shall be kept away unless continuously supervised

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

WARNING: Accessible parts may become hot during use.

Young children should be kept away

During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven

HOW TO SAVE ENERGY



Using energy in a responsible way not only saves money but also helps the environment.

So let's save energy! And this is how you can do it:

Make use of residual heat from the oven. If the cooking time is greater than 40 minutes, switch off the oven 10 minutes before the end time. Important when using the timer, set appropriately shorter cooking times according to the dish being prepared.

Make sure the oven door is properly closed.

Heat can leak through spillages on the door seals. Clean up any spillages immediately.

Do not install the oven in the direct vicinity of refrigerators/freezers. Otherwise energy consumption increases unnecessarily.

UNPACKING



During transportation, protective packaging was used to protect the appliance against any damage.

After unpacking, please dispose of all elements of packaging in a way that will not cause damage to the environment.

All materials used for packaging the appliance are environmentally friendly; they are 100% recyclable and are marked with the appropriate symbol.

Caution!

During unpacking, the packaging materials (polythene bags, polystyrene pieces, etc.) should be kept out of reach of children.

DISPOSAL OF THE APPLIANCE




Old appliances should not simply be disposed of with normal household waste, but should be delivered to a collection and recycling centre for electric and electronic equipment.


A symbol shown on the product, the instruction manual or the packaging shows that it is suitable for recycling.

Materials used inside the appliance are recyclable and are labeled with information concerning this. By recycling materials or other parts from used devices you are making a significant contribution to the protection of our environment. Information on appropriate disposal centres for used devices can be provided by your local authority.


PRODUCT DESCRIPTION

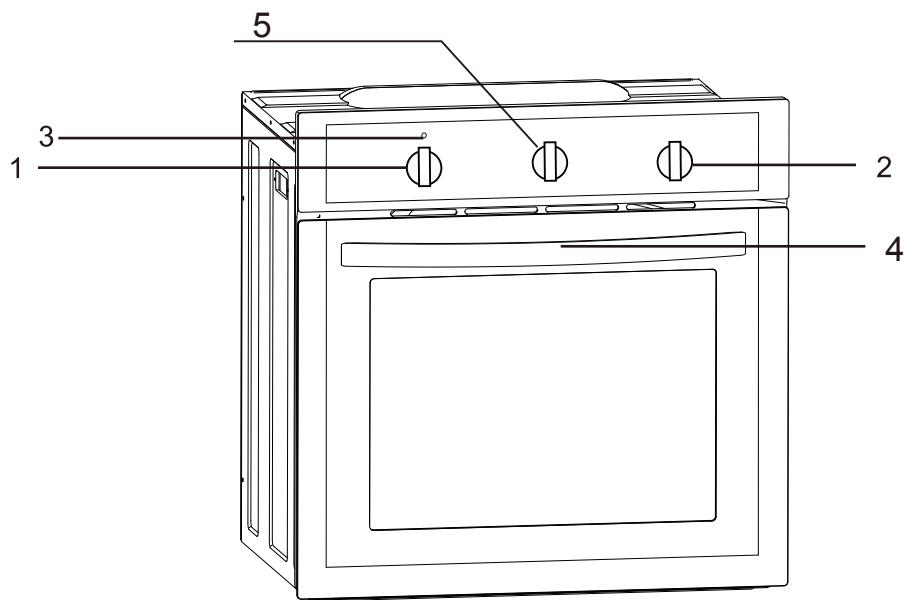

1. Temperature control knob
2. Oven function selection knob
3. Oven temperature red indicator
4. Oven door handle
5. Mechanical timer
6. Electronic programmer (8 function oven only)

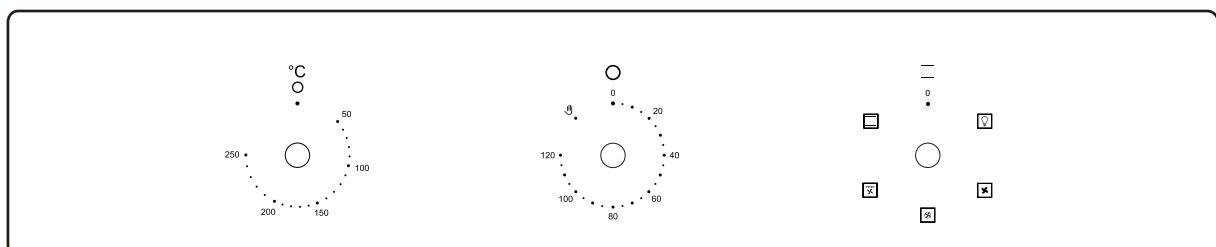

OX-1-6S-5

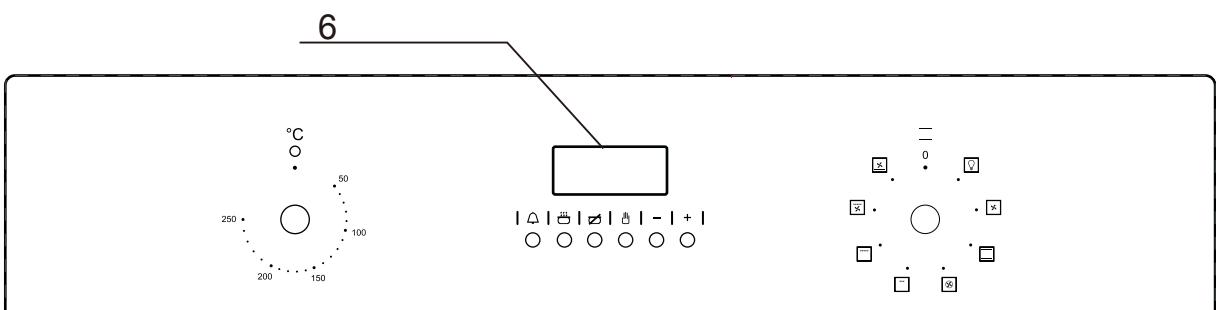

OX-1-6S-8

COOKING FUNCTIONS

▷ Oven

Oven is controlled by the function knob and the temperature control knob.

Caution!

When selecting any heating function the oven will be switched on only after the temperature has been set by the temperature control knob.

Possible settings of the oven function knob



Bottom and top heaters on

Setting the knob to this position allows the oven to be heated conventionally.



Circular Heater Fan

At this function, allows the oven to be heating up in a forced way with the thermofan, which is in the central part of the oven chamber.

Heating the oven up in this way permits even heat circulation around the dish in the oven. The advantage of this heating method is:

- Reduction of overheating-up time and of the initial heating stage.
- Possibility to bake at two cooking levels simultaneously.
- Reduction in the amount of fats and juices coming out of meat dishes, which results in an improvement in taste.



Fan (Defrost)

At this function, the fan only works. You can cool the dish or the oven chamber or defrost food.



Fan, grill element

The oven activates the grill top heater and fan function. In practice, this function allows the grilling process to be speeded up an improvement in the taste of dish, you should only use the grill with the oven door shut.



Oven Lightening

By setting the know to this positng the lighting inside the oven is switched on



Top element on

(Full/combined grill)

When the "combined grill" is active enables grilling with the entire top element.

This function allows a higher temperature at the top of the cooking area, which causes more intense browning of the dish and permits larger portions to be grilled.

Warning!

- When using the Grill function it is required that the oven door is closed.
- When the grill is in use accessible parts can become hot. It is best to keep children away from the oven.

OPERATING INSTRUCTIONS



Fan and bottom element on

At this oven function, the oven activates the bottom element and fan.

The mode is useful for baking pastry and preparation of preserved fruit and vegetables.



Half top element on

Economy Grill

Use the economy grill to grill or brown small amounts of food. Pans best positioned on the top 2 racks for best results. Pre-heat the grill for 5 minutes before use.

▷ Prior first use

- Remove packaging, clean the interior of the oven.
- Take out and wash the oven fittings with warm water and a little washing-up liquid.
- Switch on the ventilation in the room or open a window.
- Heat the oven (to a temperature of 250°C, for approx. 30 min. remove any stains and wash carefully).


Caution!

When heating the oven for the first time, it is normal phenomenon to give off smoke and peculiar smell. This will disappear about 30 min later.


▷ Mechanical timer

When using the oven, you must set food cooking time.


1. Turn mechanical timer to the time position you want.

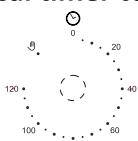

2. Turn function knob to the function position you want.

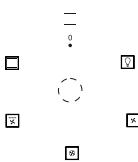


3. Turn temperature knob to the temperature position you want.

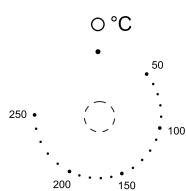

4. After above operation, oven knob runs normally.

5. When oven works till pre-set time, timer will have sound which means the cooking is finished.



If you don't want the oven work controlled by the mechanical timer, you can turn the mechanical timer to the position.

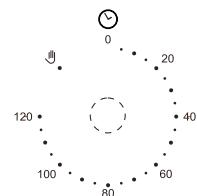

Caution!

Don't turn mechanical timer in a clockwise way front 120 to “”.

► **Electronic programmer (Only for OX-1-6S-8)**

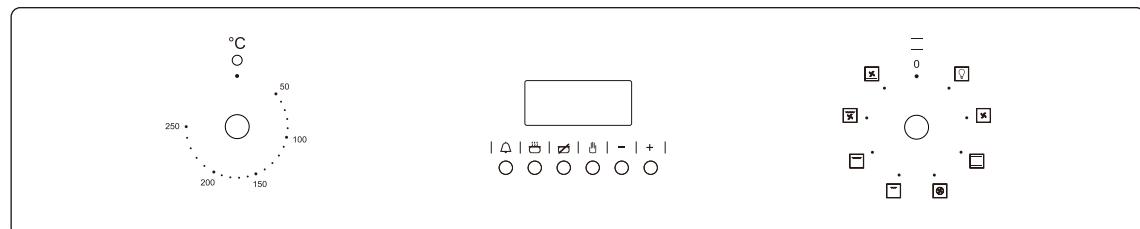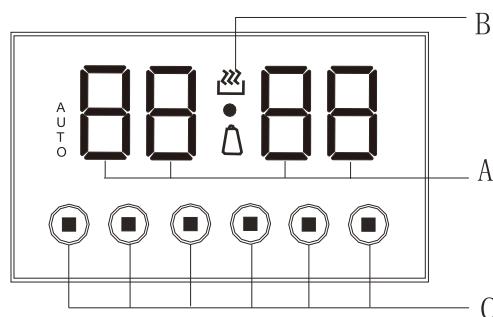

A- Display field

B- Functions

A
U
T
O - Automatic operation indication

- Cooking indication

● - Running indication

- Timer

C-Buttons

- Timer

- Cooking time

- End of cooking time

- Manual position and cancellation of the set cooking programme

- To decrease the numbers on the digital display


+ - To increase the numbers on the digital display

Caution!


Before any setting, press button 4 to start the oven.

Setting the time


1. After connection to the mains or reconnection after a power cut, the display shows flash “ 0.00 ” and .

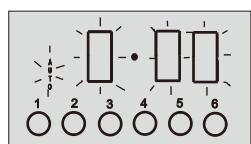

2. Press button 4 or both button 2 and 3 at the same time the signal function  is on.

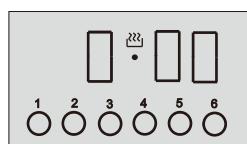

3. The signal function • been flashing, set the current time using buttons 5 and 6. 5 seconds after the time has been set, the new data will be saved. The signal function • is on.

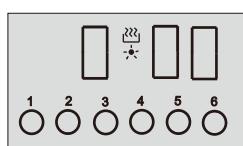


Timer


The timer can be activated at any time and any function. The timer can be set for from 1 minute to up to 23 hours and 59 minutes.

To set the timer you should:


1. Press button 1, the display will show “0.00” and flashing .

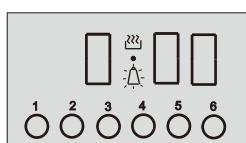


2. Set the timer using buttons 5 and 6.

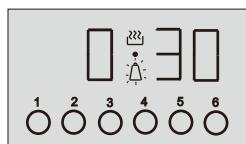

3. 5 seconds after the time is set, the signal function  is on. The new data will be saved and the display will show the current time.

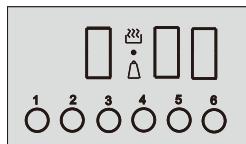


4. Press button 1, the remanent time will be shown on the display. (In the last minute, the display will show the seconds)

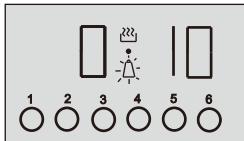

If you want to reset the timer, repeat step 2 and set time to 0:00.

- When the set time is up the alarm signal will be activated and the signal function starts flashing again.

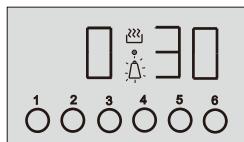

- Press any button, the signal function and alarm signal will go off. If the alarm signal is not turned off manually, it will be turned off automatically after 7 minutes.

Caution!

Besides timer alarm, any other alarms can be turned off by pressing button 1, 2, 3 or 4. If the alarm signal is not turned off manually, it will be turned off automatically after 7 minutes.

Semi-automatic operation

If the oven is to be switched off at a given time, or after defined period, you should:

- Set the oven function knob and the temperature regulator knob to the setting at which you want the oven to operate.
- Press button 4, the oven will begin to work and the function signal is on.
- Press button 2 or 3, then the display will show flashing .
- Set the required time using buttons 5 and 6, within a range from 1 minute to 10 hours.
- The set time is introduced to the memory after 5 seconds, then the display will show the current time. At the same time, the function signal is on.
- When the set time has passed, the oven is switched off automatically, the alarm is activated, the signal function is off, and the signal function starts flashing again.
- Press button 1, 2, 3, the alarm signal will go off, if press button 4, the alarm signal and signal will all go off. Or if the alarm signal is not turned off manually, it will be turned off automatically after 7 minutes.

Caution!

- The cooking time and switch-off time range:

Cooking time range: $0 < t \leq 10$ hours

Switch-off time range: current time < switch-off time \leq current time + 10 hours


Switch off time = current time + cooking time

- When using the semi-automatic operation, set either the cooking time or the switch-off time.

- If you set the cooking time to 0 or set the switch-off time to the current time, the auto function will be off.

For example:


The current time is 2:00, the maximum switch-off time is set to be 12:00 ($2:00 + 10:00 = 12:00$).

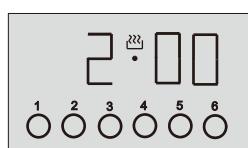


There are two methods to achieve this setting:

First method:

- Press button 2, then the display will show flashing .

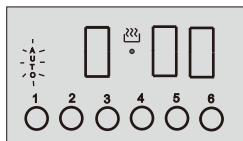


2. Set the cooking time using buttons 5 and 6.

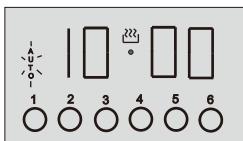


Second method:

1. Press button 3, then the display will show flashing $\frac{1}{2}$.

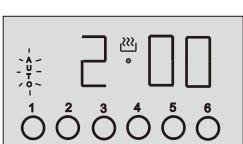

2. Set the switch-off time using buttons 5 and 6.

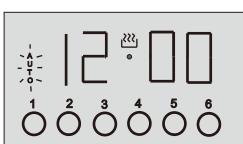

5 seconds after the setting, the auto function is on. 10 hours later, the current time shows "12.00" The alarm signal is activated, the signal function beep is off, and the signal function $\frac{\Delta}{\text{H}}$ starts flashing.

Automatic operation

If the oven is to be switched on for a specified period of time and switched off at a fixed hour then you should set the cooking time and the stop time:


1. Set the oven function knob and the temperature regulator knob to the setting at which you want the oven to operate.
2. Press button 4, the oven will begin to work and the function signal beep is on.
3. Press button 2, the display will show flashing $\frac{\Delta}{\text{H}}$. Set the cooking time using buttons 5 and 6, within a range from 1 minute to 10 hours.
4. Press button 3, set the switch-off time using buttons 5 and 6.
5. The set time is introduced to the memory after 5 seconds, then the function signal $\frac{\Delta}{\text{H}}$ is on. When the start time is reached, the oven will begin to work and the display will show the current time. At the same time, the function signal beep is on.
6. When the set time has passed, the oven is switched off automatically, the alarm signal is activated, the signal function beep is off, and the signal function $\frac{\Delta}{\text{H}}$ starts flashing again.
7. Press button 1.2.3, the alarm signal will go off, if press button 4, the alarm signal and $\frac{\Delta}{\text{H}}$ signal will all go off. Or if the alarm signal is not turned off manually, it will be turned off automatically after 7 minutes.

Caution!


- Work time = switch-off time - cooking time

For example:


If the current time is 2:00; cooking time set to be 3 hours ; switch-off time set to be 10:00, the work time will be 7:00 (7:00=10:00-3:00).

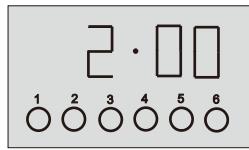


1. Press button 4, the oven begin to work, and the signal function is on.

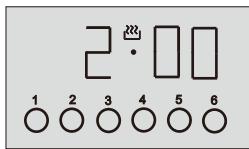


2. Press button 2, then the display will show flashing .

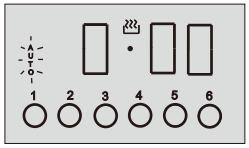


3. Set the cooking time to be "3.00" with buttons 5 or 6.

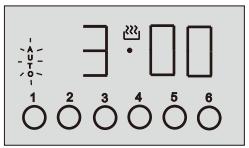


4. Press button 3.

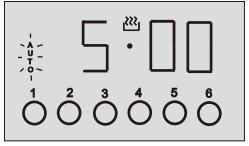


5. Set the switch-off time to be "10.00" with buttons 5 or 6. the signal function goes out.

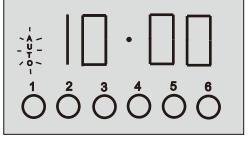


6. 5 seconds after setting, the auto function is on.

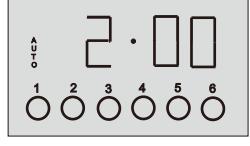

7. When it up to 7:00 , the oven will begin to work and the signal function is on.

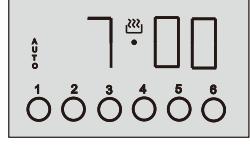

8. When it up to 10:00 , the alarm signal is activated, the signal function is off, and the signal starts flashing.

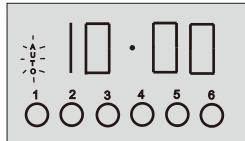

- If the cooking time set to be 0 or the switch-off time set to the current time, the auto function will be off.

Cancel settings

Cancel automatic function

Press button 2 and 3 simultaneously or button 4, the auto function will be cancelled, and the function signal will go out. Then the display will show the current time.

Cancel timer settings

Press button 1 to select timer settings, and then press button 5 set time to 0:00, 5seconds later, the timer is cancelled.

BAKING IN THE OVEN

Baking pastry

Most appropriate position for baking is the application of both upper and lower heater, or the hot air.

Warning!

- The baking parameters given in Tables are approximate and can be corrected based on your own experience and cooking preferences;
- In case you may not find any particular type of cake in the tables, use the information available for the next most similar type of cake.

Baking with upper and lower elements

- Use only a single guide level.
- This baking position is especially suitable for baking dry pastry, bread and teacakes. Use dark baking pans. Light pans reflect heat and pastry is not adequately browned.
- Always place baking pans on the grid rack. Remove the grid only if baking in the flat biscuit tray, supplied with the appliance.
- Preheating shortens the baking time. Do not put the cake in the oven until proper temperature is obtained.

Baking tips

Is cake baked?

Pierce the cake with a wooden skewer at the thickest part, if the dough does not stick to it, the cake is baked. You may switch off the oven and use the remaining heat.

Cake has fallen

Check the recipe. Use less liquid next time. Follow the mixing times, especially when using electric kitchen mixers.

Cake is too light on the bottom

Use dark baking pan next time, or place the pan one level lower, or switch on the lower heater a while before the completion.

Cheese cake is undercooked

Next time reduce the baking temperature and extend the baking time.

Warnings regarding the baking tables

- The tables indicate the temperature range. Always select lower temperature first. You may always increase the temperature in case pastry needs more baking.
- Baking times are indicative only.
- The asterisks indicates that the oven requires preheating.

▷ Roasting

Best results are obtained with the engagement of both upper and lower elements.

Best heating mode for each type of roasting pan is indicated by bold print in the Roasting Tables.

Tips regarding roasting pans

- For best results, use light enamel pans, temperature resistant glass pans, clay dishes or cast iron dishes.
- As stainless steel dishes reflect the heat, they are not recommended.
- If you cover your roast or wrap it in foil, it will preserve its juices and the oven will remain clean.
- The roast will be cooked quicker if it is left uncovered. Large roasts can be placed directly on the grid with the oven tray below for catching the juices and melted fat.

Attention when roasting!

Roasting tables indicate suggested temperatures, guide level and roasting times.

Roasting time largely depends upon the type of meat, its size and quality. So you may expect some variations

- Roasting of large chunks of meat may produce excessive steaming and condensation on the oven door. This is quite normal, and does not affect the operation of the oven.
- However, after the completion of roasting wipe the oven door and the glass thoroughly.
- Add as much liquid as necessary to prevent burning of juice, dripping from meat. Roast must be checked regularly and liquid added if necessary.
- At approximately the middle of the indicated time turn the roast round, especially if you use the deep roast dish.
- When roasting on the grill grid, place the grid in the deep roasting pan and insert both into the sliding guide. The bottom pan will intercept dripping fat.
- Never leave roast to cool in the oven, as it might produce condensation and corrosion of the oven.

▷ Grilling

- Take extra precautions when grilling. Intensive heat from infrared element makes the oven and the accessories extremely hot. Use protective gloves and barbecue accessories!
- Perforated roast may produce spurting of hot grease (sausages). Use long grill tongs to prevent skin burns and protect your eyes.
- Supervise the grill at all time. Excessive heat may quickly burn your food and provoke fire!
- Do not let the children in the vicinity of the grill.

Grill heater is especially suitable for the preparation of low-fat sausages, meat and fish fillets and steaks, and for browning and crisping the roast skin.

Tips for grilling

Grilling should be carried out with the oven door closed.

Grilling tables indicate the recommended temperature, guide levels and grilling times, which may vary according to the weight and quality of meat

- Grill element should be pre-heated for 3 minutes.
- Oil the grill grid before placing food on it, to avoid food sticking to the grid.
- Place the meat upon the grid, then place the grid upon the grease interception pan. Insert both trays into the oven guides.
- Turn the meat round after half of the grilling time has expired. Thinner slices will require only one turn, for larger chunks you might need to repeat the procedure. Always use barbecue tongs to avoid losing excessive juice from meat.
- Dark beef meat is grilled quicker than lighter pork or veal.
- Clean the grill, the oven and the accessories each time after use.

COOKING GUIDE

Baking in the oven

Type of pastry	Guide level(from down upwards)	Temp (°C) 	Guide level(from down upwards)	Baking time (in min)
Sweet pastry				
Sponge cake/marble cake	2	170-180	2	60-80
Victoria sponge	2	160-180	2	65-80
Base for a layer cake	2-3	170-180	2-3	20-30
Sponge layer cake	2	170-180		30-40
Fruit cake(crispy base)			2-3	60-70
Cheesecake(short crust)			2	60-90
Teacake	2	160-180	2	40-60
Bread(e.g. wholegrain bread)	2	210-220	2	50-60
Fruit cake(crispy base)	3	170-180	2	35-60
Fruit cake(with yeast)			2	30-50
Crumble cake	3	160-170		30-40
Sponge roll	2	180-200		10-15
Pizza(thin base)	3	220-240		10-15
Pizza(thick base)	2	180-210		30-50
Buns	3	160-170	2	10-30
Puff pastry	3	180-190	2	18-25
Meringues	3	90-110		
Choux buns			2	35-45

Roasting in the oven

Type of meat	Guide level(from bottom up)	Temp (°C) 	Roasting time (in min)	Roasting time (in min)
Beef				Per 1 cm
Roast beef or file rare			3	12-15
Oven warmed up juicy("medium")			3	15-25
Oven warmed up "well done"			3	25-30
Oven warmed up Roast joint	2	160-180	2	120-140
Pork				
Roast joint	2	160-180	2	90-140
Ham	2	160-180	2	60-90
Fillet			3	25-30
VEAL	2	160-170	2	90-120
LAMB	2	160-180	2	100-120
VENISON	2	175-180	2	100-120
POULTRY				
Chicken	2	170-180	2	50-80
Goose(approx.2kg)	2	160-180	2	150-180
Fish	2	175-180	2	50-80

MAINTENANCE

Caution!

When the functions with fan have been selected but the temperature knob is set to zero only the fan will be on.


With this function you can cool the dish or the oven chamber.

Oven guide levels

Baking pans and accessories (oven grid, baking tray, etc.) may be inserted into the oven in 5 guiding levels.

Appropriate levels are indicated in the tables that follow.

Always count levels from the bottom upwards!

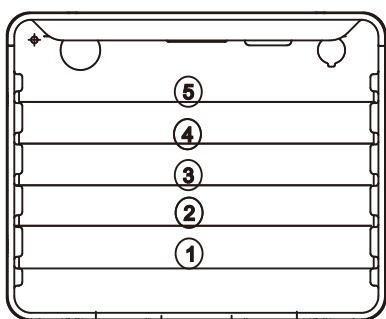

By ensuring proper cleaning and maintenance of your oven you can have a significant influence on the continuing fault-free operation of your appliance.

Before you start cleaning, the oven must be switched off and you should ensure that all knobs are set to the "0" position. Do not start cleaning until the oven has completely cooled.

▷ **Oven**

- The oven should be cleaned after each use.
- Cool the oven completely before cleaning.
- Never clean the appliance with pressurized hot steam cleaner.
- The oven chamber should only be washed with warm water and a small amount of washing-up liquid.

● **Steam cleaning**

-pour 250ml of water (1 cup) into a bowl placed in the oven on the first level from the bottom.

-Close the oven door.

-Set the temperature knob to 100°C, and the function knob to the bottom heater position.

-Heat the oven chamber for approximately 30 minutes.

-Open the oven door, wipe the chamber inside with a cloth or sponge and wash using warm water with washing-up liquid.

●After cleaning the oven chamber wipe it dry.

Caution

Do not use cleaning products containing abrasive materials for the cleaning and maintenance of the glass front panel.

▷ Replacement of the oven light Bulb


Before any maintenance is started involving electrical parts, the appliance must be disconnected from the power supply.

If the oven has been in use, let the oven cavity and the heating elements cool down before attempting any maintenance.

Changing the bulb

Pull out the protective cover. We recommend that you wash and dry the glass cover at this point.

Carefully remove the old bulb and insert the new bulb suitable for high temperatures (300°C) having the following specifications: 220-240V, 50Hz, 25W, G9 fitting. Refit the protective cover.

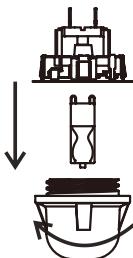

IMPORTANT

Never use screwdrivers or other utensils to remove the light cover.

This could damage the enamel of the oven or the lamp holder. Remove only by hand

IMPORTANT

Never replace the bulb with bare hands as contamination from your fingers can cause premature failure. Always use a clean cloth or gloves.

Please note:


The bulb replacement is not covered by your guarantee

Door removal


In order to obtain easier access to the oven chamber for cleaning, it is possible to remove the door.

To do this, tilt the safety catch part of the hinge upwards. Close the door lightly, lift and pull it out towards you. In order to fit the door back on to the cooker do the reverse. When fitting, ensure that the notch of the hinge is correctly placed on the protrusion of the hinge holder. After the door is fitted to the oven, the safety catch

should be carefully lowered down again. If new the safety catch is not set it may cause damage to the range when closing the door.

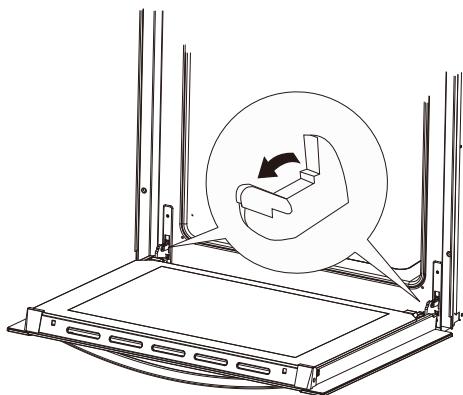


Tilting the hinge safety catches

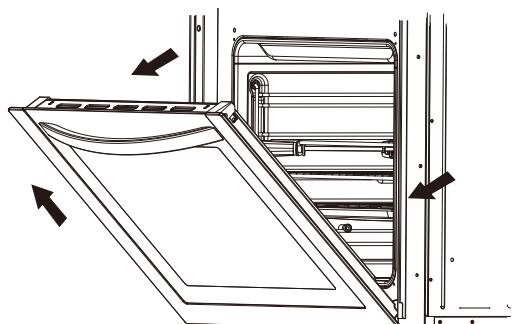


Door removal

▷ Removal of the internal glass panel

Press the symbol “↑” and outward the plastic latch that is the corner at the top of the door. Next take out the glass from the second blocking mechanism and remove. After cleaning, insert and block the glass panel, and insert in the blocking mechanism.

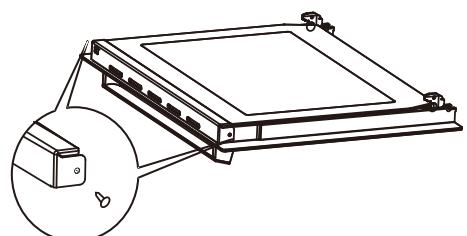

▷ Install door

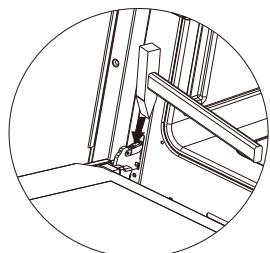

INSTALLATION

▷ Installing the oven

The kitchen should be dry and have effective ventilation according to the existing technical provisions

Main lead behind the oven must be placed in such manner to avoid touching the back panel of the oven because of the heat it develops during operation


Remove any packaging materials (foils, artificial foam, nails, etc.) from the reach of children, because they represent potential danger. Children may swallow small parts, or suffocate with foils.

This is a built-in oven, which means that its back wall and one side wall can be placed next to a high piece of furniture or a wall. Coating or veneer used on fitted furniture must be applied with a heat resistant adhesive (100°C), this prevents surface deformation or detachment of the coating. If you are unsure of your furniture's heat resistance, you should leave approximately 2cm of free space around the oven. The wall behind the oven should be resistant to high temperatures. During operation its back side can warm up to around 500°C above the ambient temperature.

Make an opening with the dimensions given in the diagram for the oven to be fitted

The appliance must be earthed.


Insert the oven completely into the opening without allowing the four screws in the places shown in the diagram to fall out.

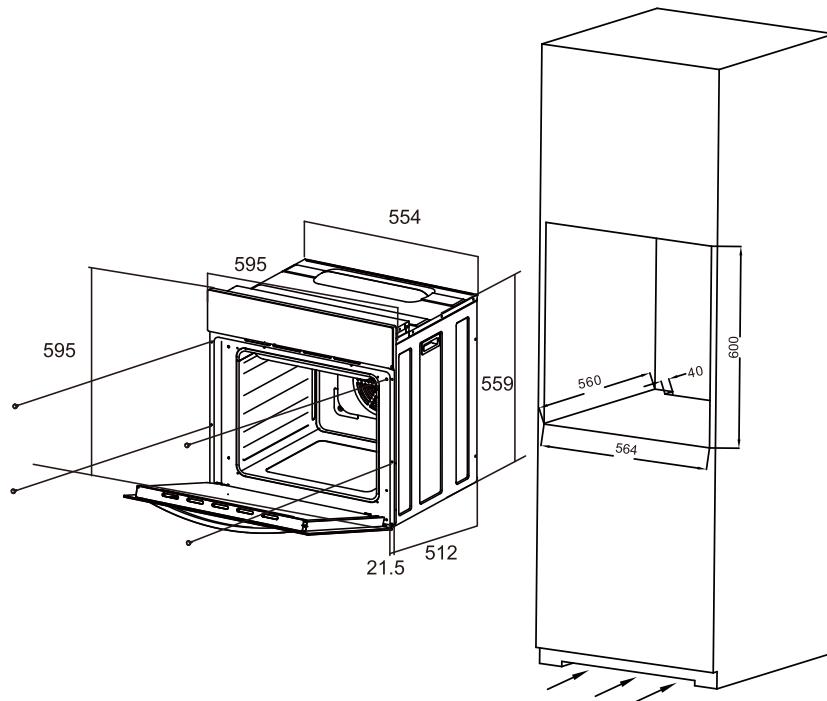

▷ Electrical connection

Warning!


All electrical work must be carried out by a suitably qualified and authorized electrician. No alterations or willful changes in the electricity supply should be carried out.

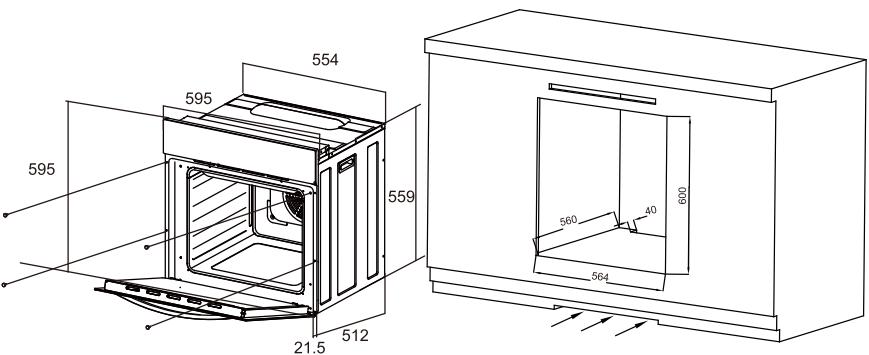

- Before attempting the connection, check whether the voltage indicated on the rating plate corresponds to the actual mains voltage.
- Mains lead should be minimum 1.5m long.
- Earthing wire should be installed in such manner to be the last one pulled out in case the safety relief device of the mains lead should fail.
- Mains lead behind the oven must be placed in such manner to avoid touching the back panel of the oven because of the heat it develops during operation.
- The cable of correct size rating must be used cable type H05VV-F 3x1.5mm². the grounding wire shall be longer than the other wires.

Connection (by authorised electrician)

- Using the screwdriver open the connector cover at the rear of the appliance. Release two locks located at either side of the connector bottom.
- Mains lead must be led through the relief safety device, protecting the mains lead cable from disconnection.
- Tighten the relief device securely and close the connector cover.

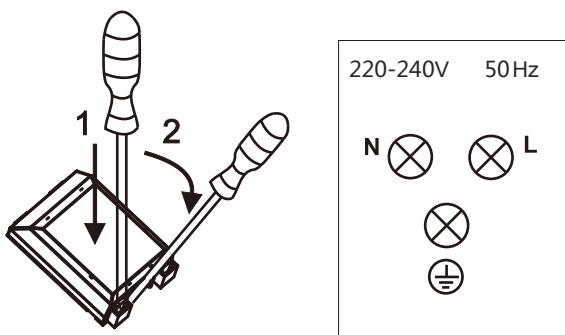

Colour code

L=exterior live wires, usually coloured black, brown.

N=neutral

The colour is usually blue.

Beware of the correct N-connection!



E=earthing wire, the colour is green/yellow.

OPERATION IN CASE OF EMERGENCY

In the event of an emergency, you should:

- Switch off all working units of the oven
- Call the service centre
- Some minor faults can be fixed by referring to the instructions given in the table below. Before calling the customer support centre or the service centre check the following points that are presented in the table.

PROBLEM	REASON	ACTON
1.The appliance does not work	Break in power supply	Check the household fuse box; if there is a blown fuse replace it with a new one
	Choose wrong function	Check if function knob. Temperature knob is set to the correct position.
2.The programmer display is flashing "0.00"	The appliance was disconnected from the mains or there was a temporary power cut.	Set the current time(see use of the programmer)
3. The oven lighting does not work.	The bulb is loose or damaged.	Tighten up or replace the blown bulb(see cleaning and maintenance)

TECHNICAL INFORMATION

Model	OX-1-6S-5	OX-1-6S-8
Voltage rating	220-240V 50Hz	220-240V 50Hz
Total power	2000W	2000W
Top element	850W	850W
Grill element	1100W	1100W
Bottom element	1150W	1150W
Circular element	2000W	2000W
Fan	●	●

Cod:0040304649